


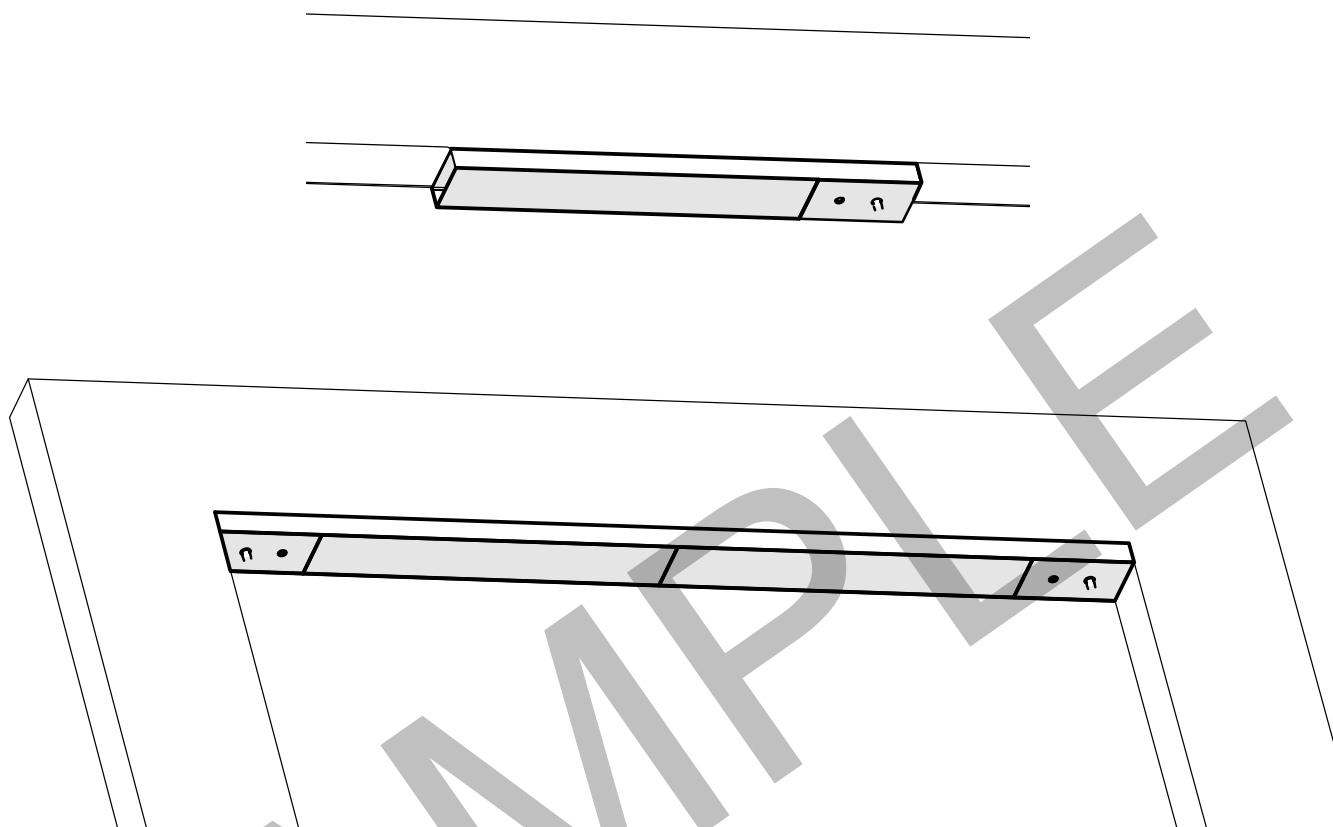


Headers - 4-1/8", 4-1/2", 6"
with for single or double doors

Installation instructions

10-2017


1.2 Pin diameter specifications

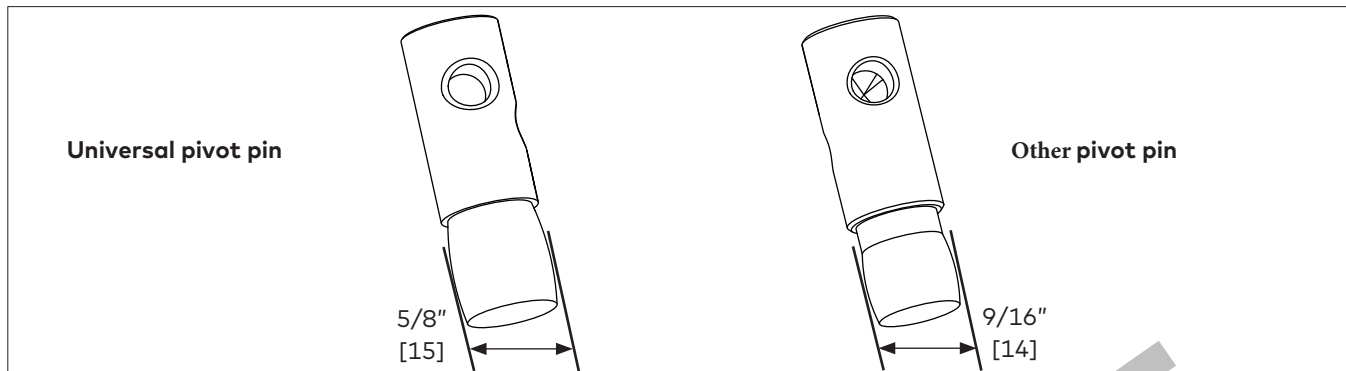

2 Installation instructions

2.1 Install header for single or double door

Fig. 1 Pivot covers

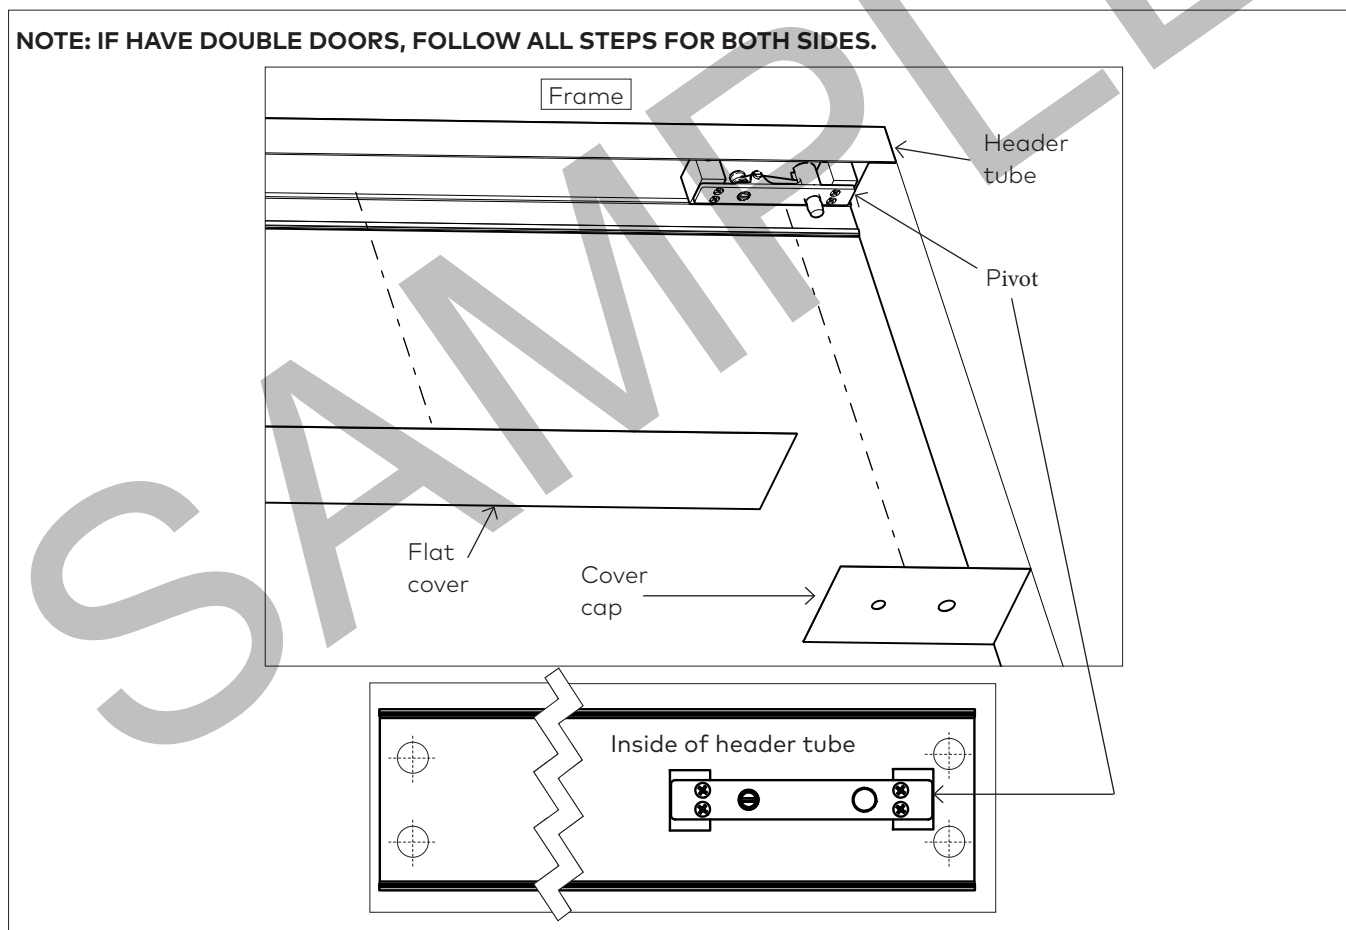


- | | |
|---|---|
| 2.1.1 Remove covers from header tube. | 2.1.4 Snap cover cap and header flat cover back into place. |
| 2.1.2 Pre-drill holes for installation. | |
| 2.1.3 Secure header to overhead frame using appropriate fasteners dependent upon application. | 2.1.5 For double door applications, follow steps 2.1.1 through 2.1.4. |

NOTE: Always ensure the proper fasteners and adequate number of fixing points for your specific field conditions.

2.2 Adjustments

Fig. 2 Pivot

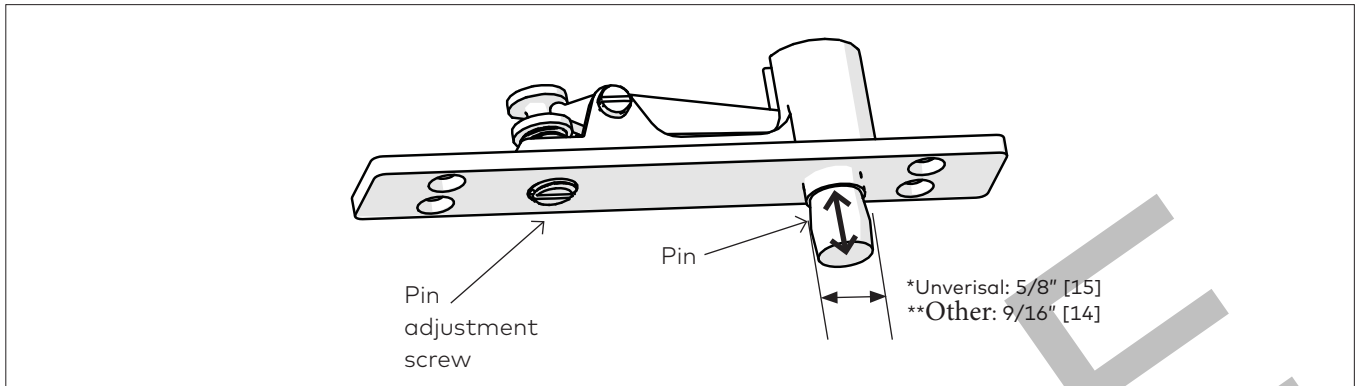

2.2.1 Ensure pivot is plumb and level.

2.2.2 Raise walking beam pivot pin up completely by rotating pin adjustment screw.

2.2.3 Lower pin once door is properly in place.