

Glass panic device - top latching glass mount (used with exterior pull types: A, B, D, F, G, H, J, JS, L, LS, X, Z)

## **Installation instructions**


10-2020

| EN |

### 2.2 Mount exterior pull components - actuator housing

Fig 3

# NOTE: PANIC DEVICE SHOULD BE MOUNTED TO DOOR IN A HORIZONTAL POSITION. LAY GLASS PANEL FLAT ON SAW HORSES AND MOUNT THE FOLLOWING EXTERIOR PULL COMPONENTS FIRST. EXTERIOR SIDE SHOULD FACE UP.

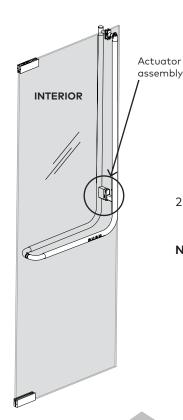


Pull Options

Door side Pull type

Interior D

 
Exterior D (shown)




2.2.1 Slide the actuator bushing(s) onto the mounting plate locating pins.

NOTE: Depending upon glass thickness, add appropriate quantity of bushings.


Glass width	No. of bushings
3/8" - 7/16"	3
1/2" - 9/16"	4
5/8" - 11/16"	5
3/4" - 13/16"	6

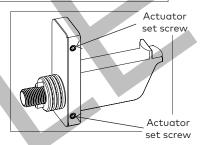

Tools required		
Exterior housing	3/8" hex key	
screw		

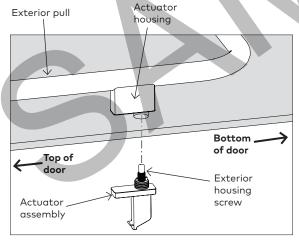


- 2.2.2 Place exterior pull against glass and align with hole in glass.
- 2.2.3 Slide exterior housing screw through hole in actuator assembly.
- Orient actuator assembly as shown above.

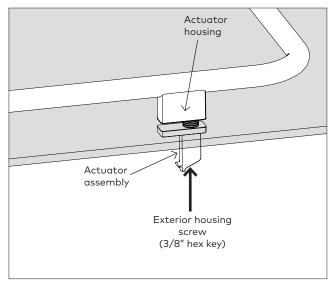

- 2.2.4 Secure actuator assembly (through glass) to actuator housing by tightening exterior housing screw.
- Exterior housing screw can be accessed through end of actuator assembly.
- Use 3/8" hex key.

### 2.3 Mount exterior/interior pull components - top standoff

#### Fig 4

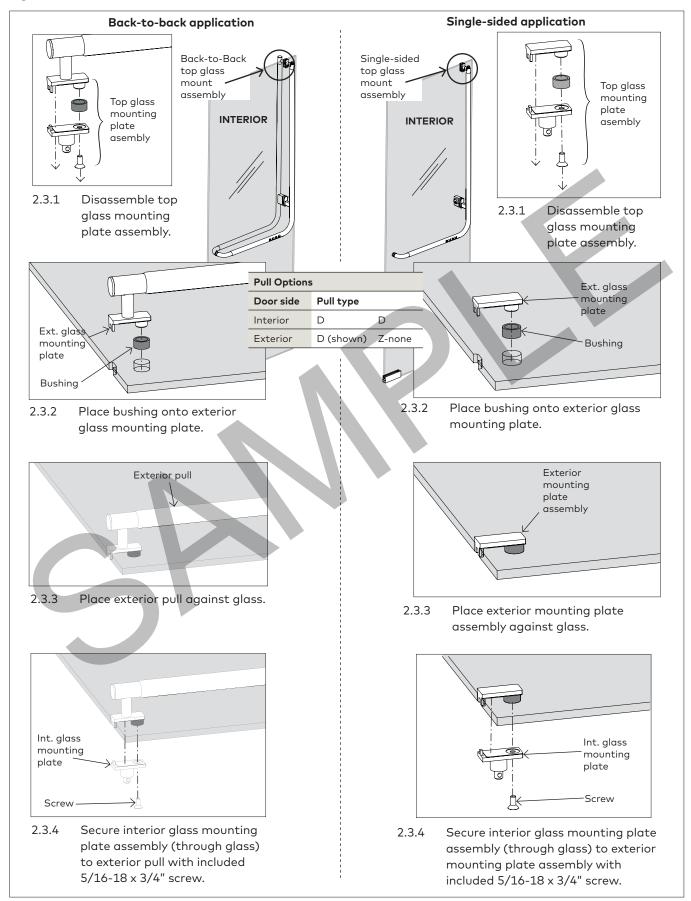

10-2020