


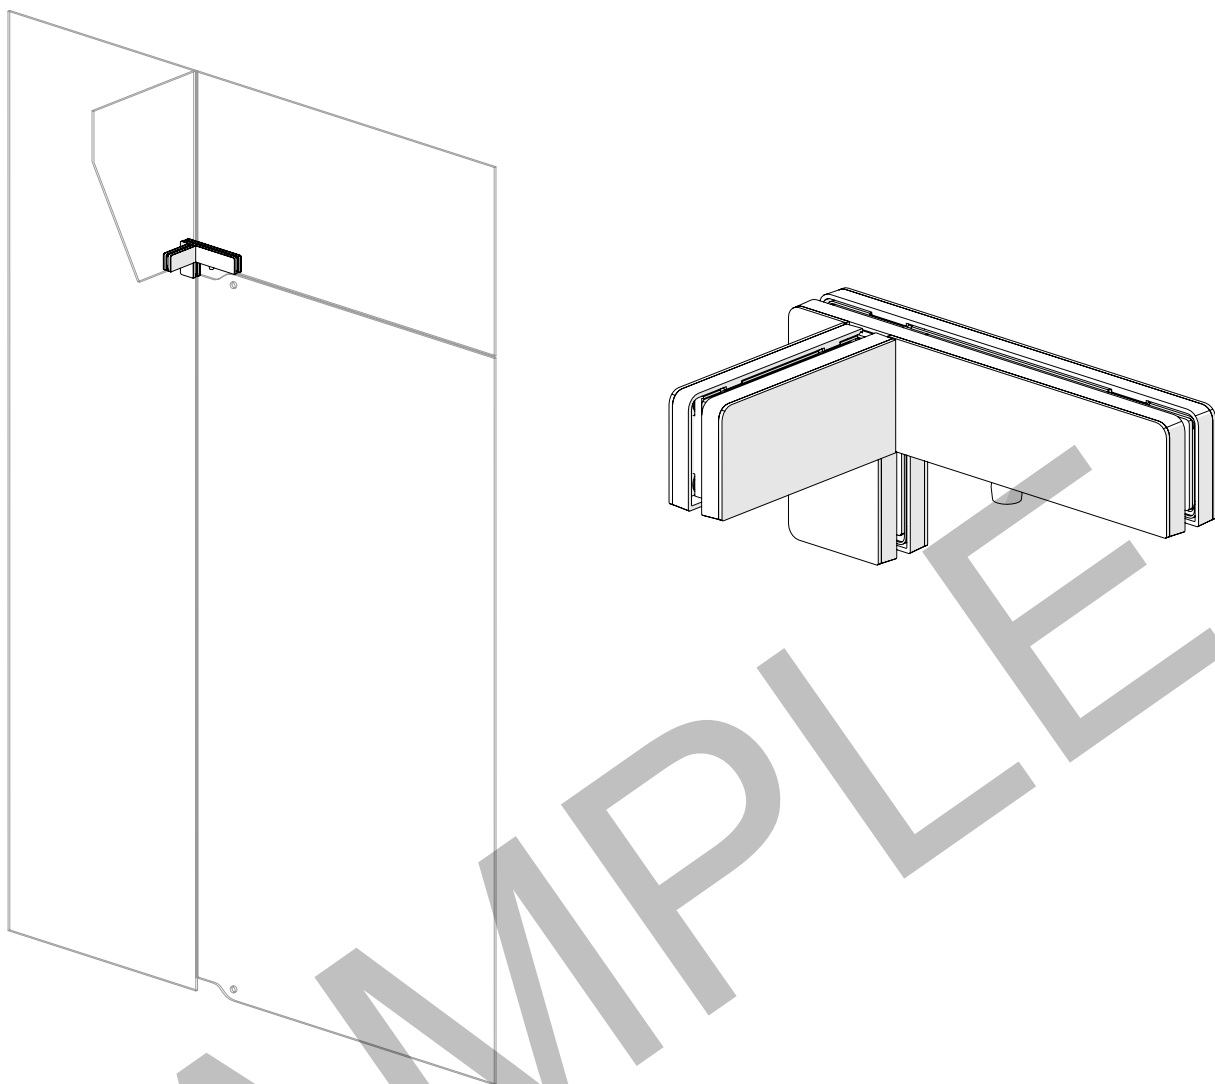


Transom and Sidelite Connector fittings
with one or two fins

Installation instructions


1.2 Door dimensions

Fig. 1

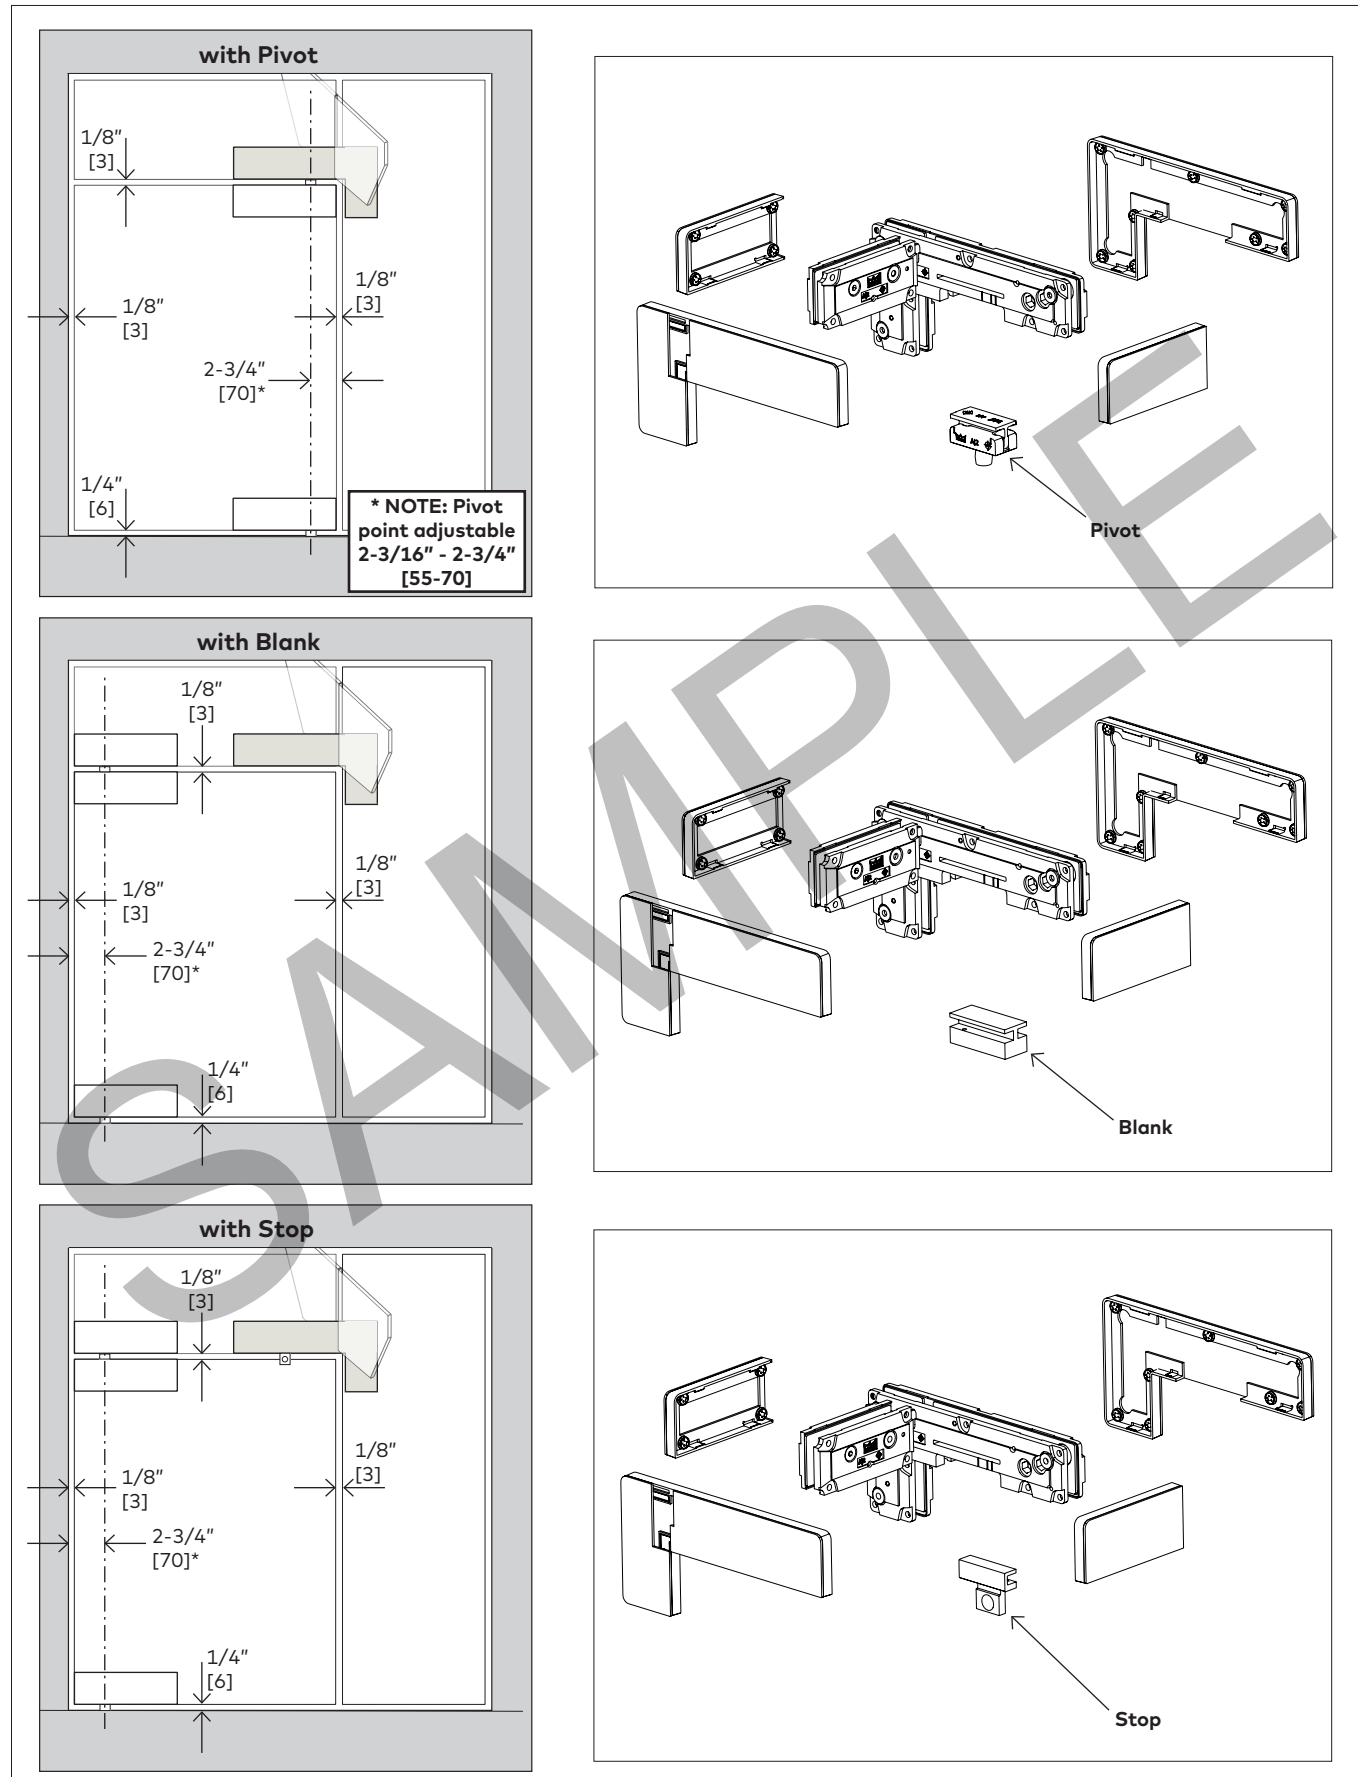

2.3 Install plates and remaining fitting parts

Fig. 5

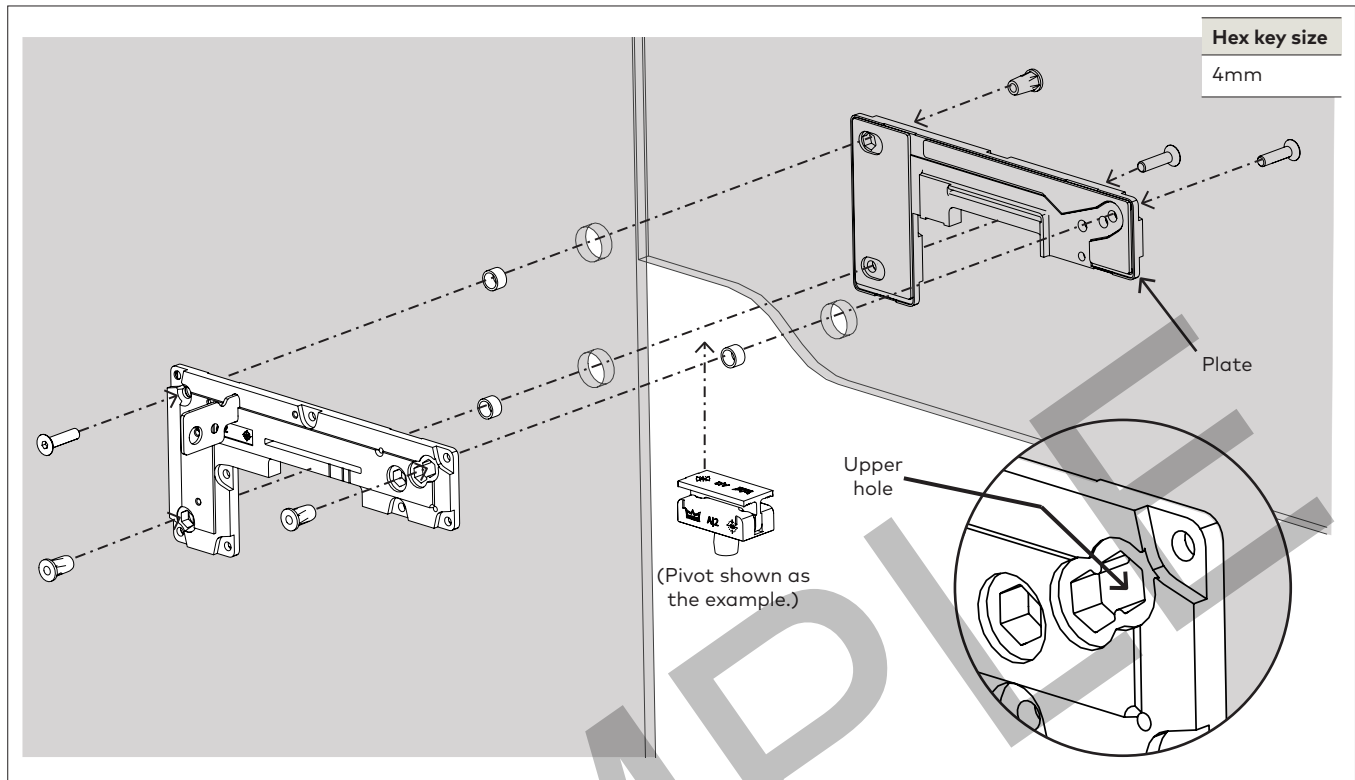

2.3.1 Disassemble patch fitting.


2.3.2 Reassemble patch fittings on glass with appropriate insert (pivot/blank/stop).

- Use a 4mm hex key. Hand tighten only.

NOTE: Use upper hole in plate.

2.4 Plumb and level the fitting

Fig. 6

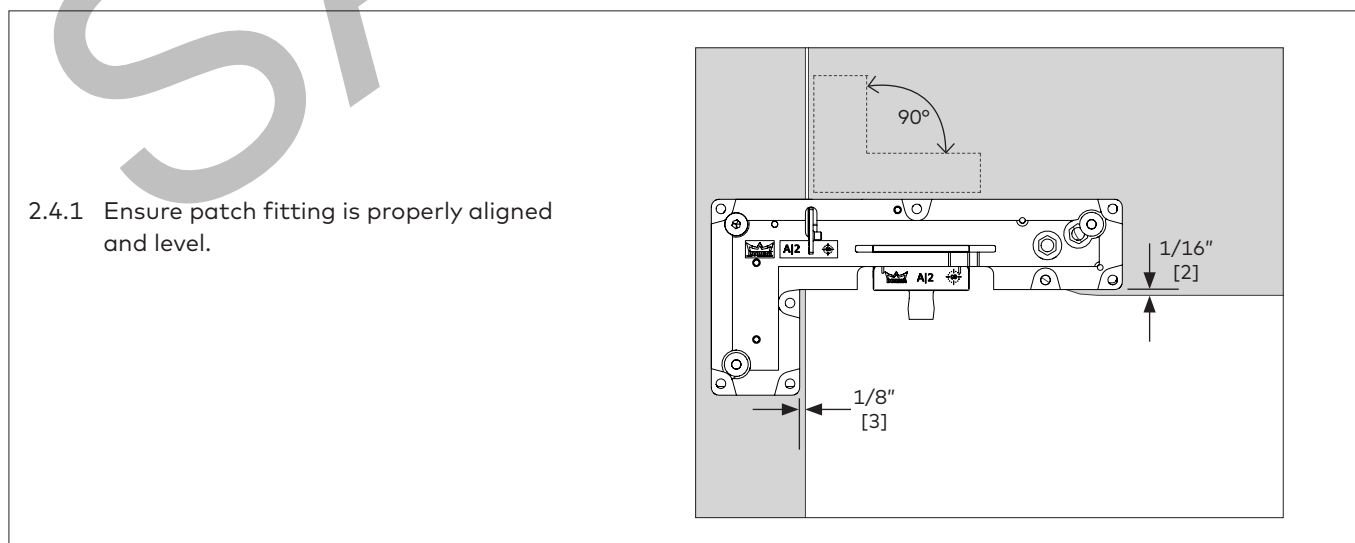

2.4.1 Ensure patch fitting is properly aligned and level.